




Assembly Instructions

Lockerette - Bank of One



PARTS LIST

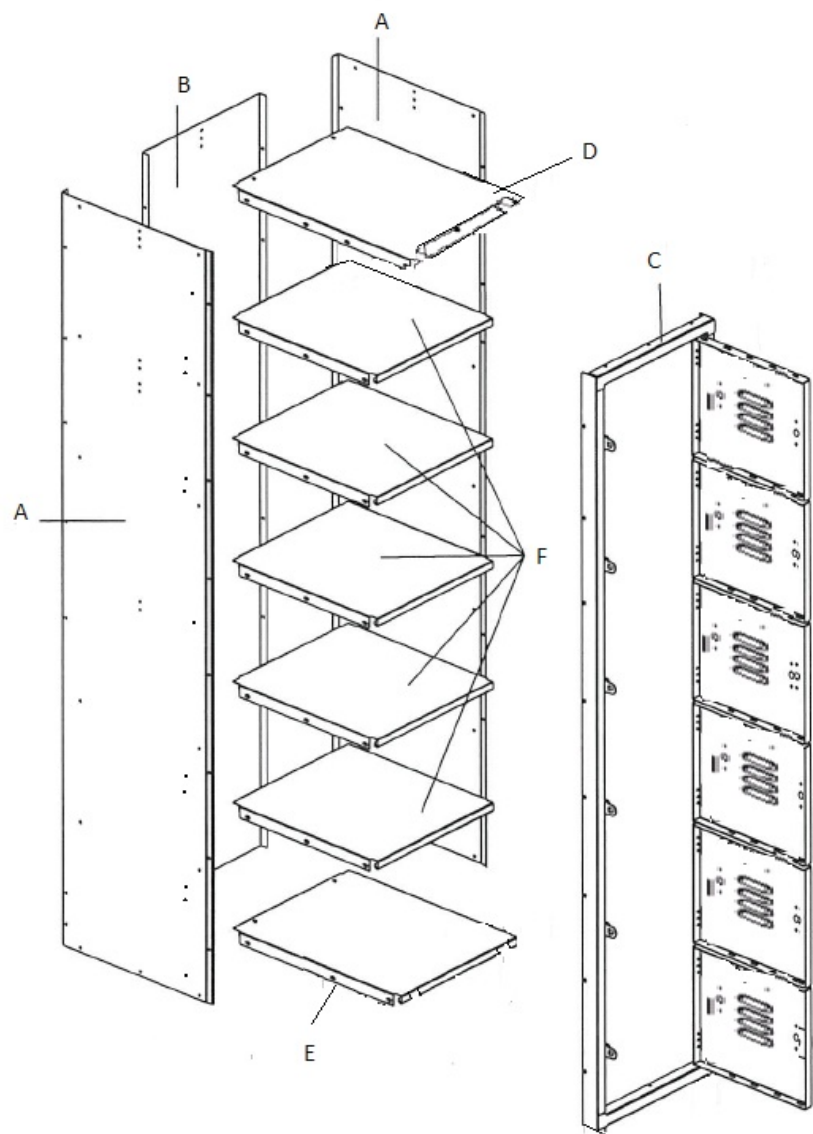


Bank of 1

	Description	Qty
A	Side Panels	2
B	Back Panel	1
C	Door/Frame Panel	1
D	Top Panel	1
E	Bottom Panel	1
F	Shelves	5

ASSEMBLY INSTRUCTIONS

Figure 1

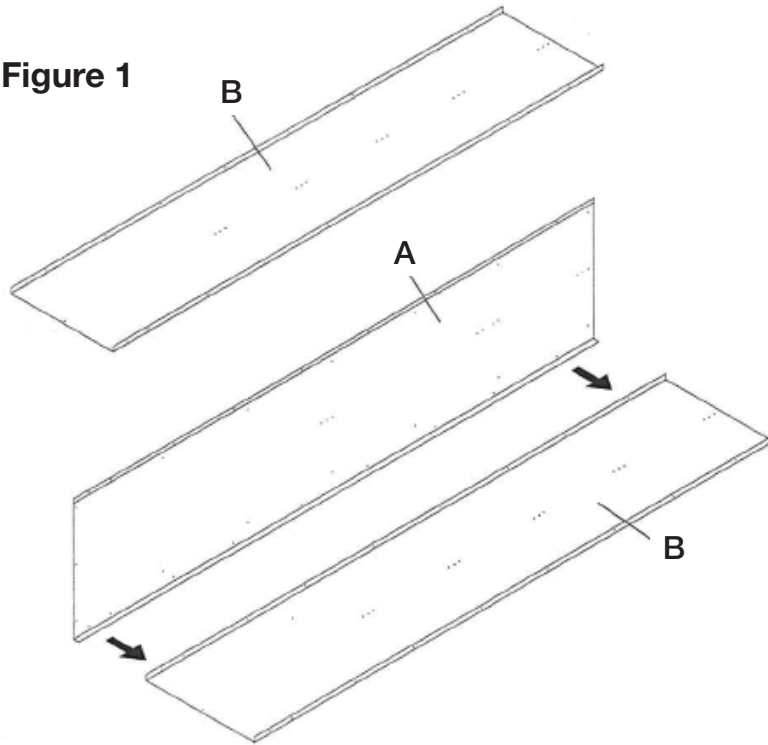

Only tighten bolts with a 3/8" nut driver once the locker is completely assembled.


1. Choose one side panel (A) as the left side, both sides are interchangeable and do not have a determined top and bottom.

2. Place back panel (B) on a flat surface with flanges facing upward. The back panel does not have a determined top and bottom.

3. Bolt the left side panel with the flanges going around the back panel (*Figure 1*). Using 10 nuts and bolts, with the nuts on the inside of the locker.


4. Bolt the top (D) and bottom (E) panels and shelves (F) to the left side and back panels. (*Figure 2*).

Figure 2

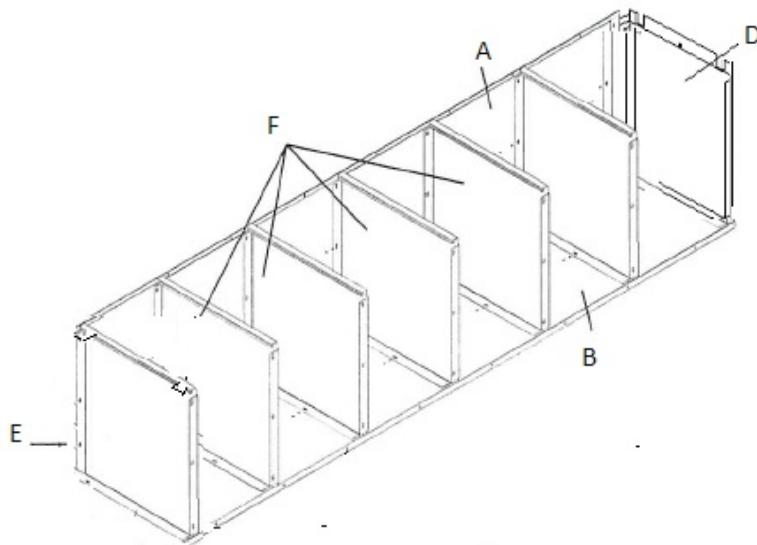

ASSEMBLY INSTRUCTIONS

Figure 3

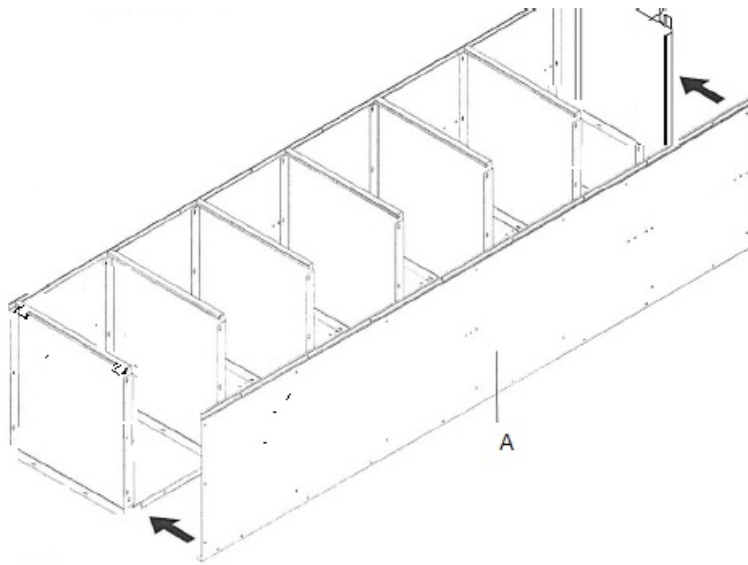

5. Bolt the right side panel (A) with the flanges going around the back panel. Bolt the side to the top, bottom and shelves. (Figure 3).

6. Position the door/frame panel (C) on top of the locker. Bolt to the locker body (Figure 4).

7. Proceed to tightening each bolt, then standing locker upright to place in desired location.

*If joining already assembled lockers together, attach units by bolting in the available holes bordering the locker frame.

Figure 4

