




# Assembly Instructions

## Lockerette - Bank of Two or Three




# PARTS LIST

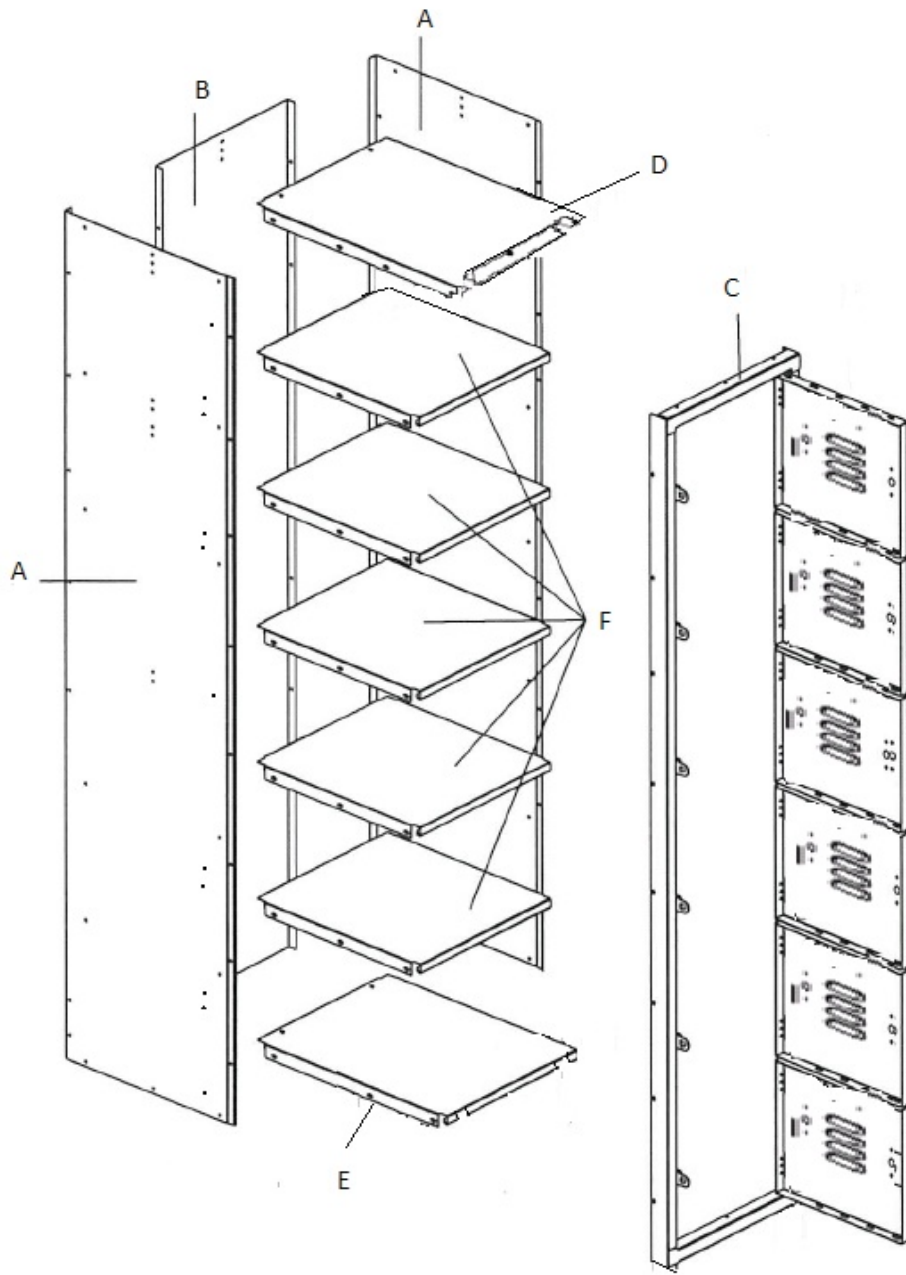

		Bank of 2	Bank of 3
	Description	Qty	Qty
A	Side/Inner Panels	3	4
B	Back Panel	2	3
C	Door/Frame Panel	2	3
D	Top Panel	2	3
E	Bottom Panel	2	3
F	Shelves	10	15

# ASSEMBLY INSTRUCTIONS

**Figure 1**

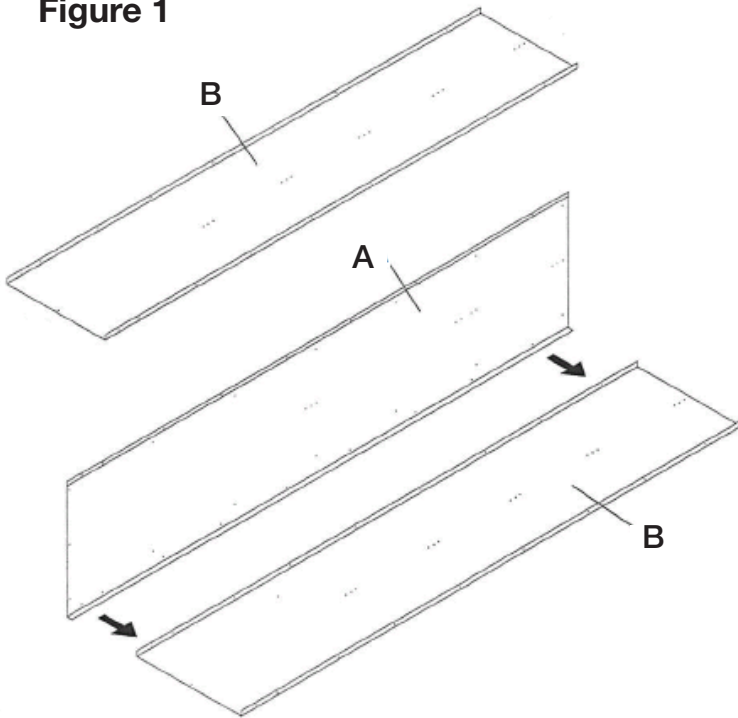

Only tighten bolts with a 3/8" nut driver once the locker is completely assembled.

**1.** Choose one side panel (A) as the left side, both sides are interchangeable and do not have a determined top and bottom.

**2.** Place back panel (B) on a flat surface with flanges facing upward. The back panel does not have a determined top and bottom.

**3.** Bolt the left side panel with the flanges going around the back panel (*Figure 1*). Using 10 nuts and bolts, with the nuts on the inside of the locker.


**4.** Bolt the top (D) and bottom (E) panels, and shelves (F) to the left side and back panels (*Figure 2*).

**5.** Bolt an inner side (A) and back panel to the flange of the first locker.

**6.** Bolt the top, bottom and shelves to the inner side.


\*If assembling a bank of two lockers, proceed to step 7. If assembling a bank of three lockers, repeat steps 4, 5 and 6.

**Figure 2**

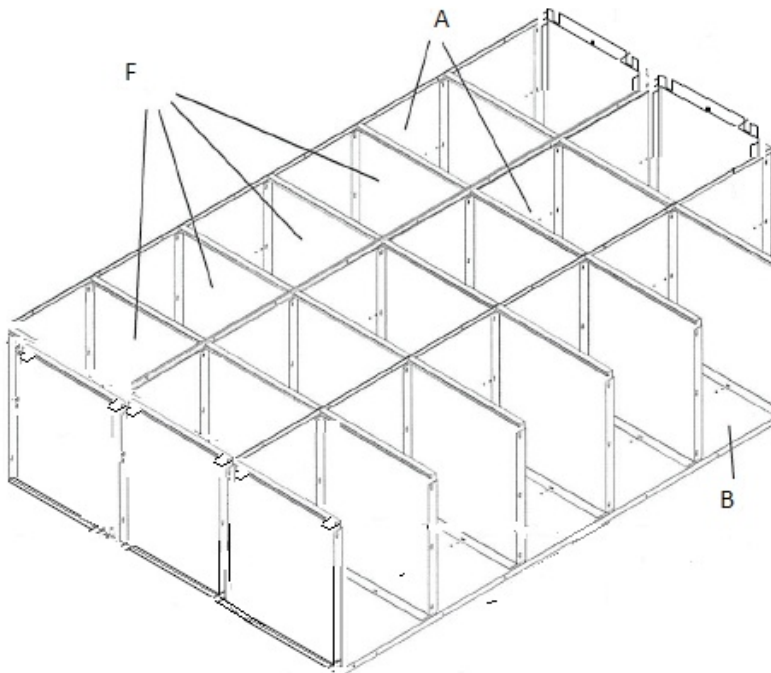

## ASSEMBLY INSTRUCTIONS

**Figure 3**

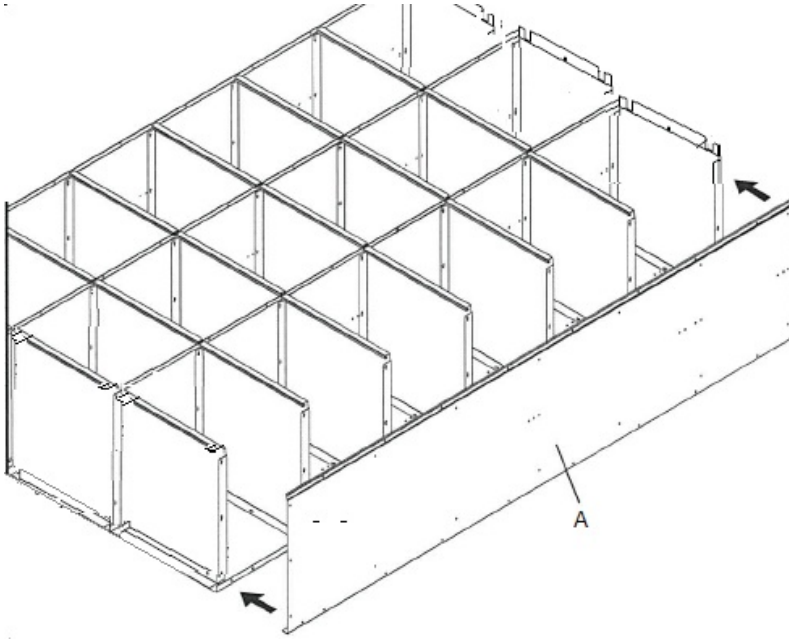

**7.** Bolt the right side panel (A) with the flanges going around the back panel. Bolt the side to the top, bottom and shelves. (Figure 3).

**8.** Position the door/frame panel (C) on top of the locker. Bolt to the locker body (Figure 4).

**9.** Proceed to tightening each bolt, then standing bank of lockers upright to place in desired location.

\*If joining already assembled lockers together, attach units by bolting in the available holes bordering the locker frame.

**Figure 4**

